



Testing USB WLAN Adapters

USB Radio

Electronic gadgets keep on getting smaller, and WLAN adapters are no exception. The first USB WLAN sticks hit the stores last year. This article tells you what to look for and how to get your USB WLAN device to work. **BY MARCEL HILZINGER**

The new year is upon us, and it is far too cold to sit out in the garden with a laptop, but Wireless LAN adapters are not only designed for outdoor use; they can provide really useful services in your apartment, at work, at the airport, and in many other public WLAN hotspots. WLAN USB sticks, which are no bigger than normal USB memory sticks and will fit nicely in your pocket or purse, have been around for a while now.

There are a few pitfalls to watch out for when buying a USB WLAN stick. In fact, Linux supports very few of the new 54 Mbit sticks, and even older models can cause you headaches.

Keeping on the Safe Side

As the WLAN boom continues, manufacturers and suppliers of USB WLAN sticks

keep springing up. This said, the only adapters that will run Linux out-of-the-box are 11 Mbit USB adapters that use the Prism2 chipset. The Netgear MA111 and D-Link DWL-122 devices in our test (see Table 1) are just two examples. You'll find a list of devices supported by Linux-wlan-ng at [1].

Suse Linux version 9.0 or newer gives you the easiest approach to operating these two adapters. After plugging in the adapter, simply launch the YaST network card setup module, select *Other (not detected)* and click on *Configure...* Select *Wireless* in the *Device type* dropdown and then click on the *Select from List* button on the right. Now select the entry at the bottom of the list *Wireless device using kernel module prism2_usb.o* and click *OK* to confirm (see Figure 1). Then click on *Wireless Settings* and set up the ESSID and operating mode.

To use a public access point (for example, at your local airport) or your WLAN DSL router at home, keep the default selection (*Managed*). Now you just need to enter the ESSID and click on *OK*. This takes you back to the *Manual network*

card configuration window. If your access point is also your DHCP server (which is the typical setup), you can simply click *Next* and then *Finish* to go surfing. If you do not have a DHCP server, you will need to configure a static network address. Check your access point or WLAN router documentation for more details.

If you just need to connect two PCs directly, select *Ad-Hoc* mode instead. In this case, you also need to select the communication channel. The Linux-wlan-ng project uses channel 6 by default – a safe choice. In the dialog box where you entered the ESSID, click *Expert settings* to select a channel from the list. Then click *OK* and *Next* to go to the window where you can set up the network address. Select *Static address setup* and enter the IP address. For example, you could use *192.168.1.1* on one machine and *192.168.1.2* on the other.

A final click on *Next* should have your USB adapter ready to run. Some distributions expect you to set up the adapter manually. Box 1 tells you how to do that.

Troubleshooting

If the adapter fails to connect at first, you should first type *iwconfig* to check if the system has actually detected your wire-

Table 1: USB WLAN Test Candidates

Name	Manufacturer	Chip	Module	Speed	Linux drivers	Access Point	Ad-Hoc	Price approx.
MA111	Netgear	Prism2	prism2_usb	11 Mbit/s	✓	✓	✓	EUR 30
DWL-122	D-Link	Prism2	prism2_usb	11 Mbit/s	✓	✓	✓	EUR 25
DWL-G122	D-Link	Ralink	rt2570	54 Mbit/s	✓ ¹	✓	–	EUR 55
WL-U356	Planet	ZyDAS ZD1211	zd1211	54 Mbit/s	✓	–	–	EUR 40
WG111	Netgear	Prism Frisbee	?	54 Mbit/s	–	–	–	EUR 55
C54RU	Conceptronic	Intersil/Prism	?	54 Mbit/s	–	–	–	EUR 30
SMC2862W-G	SMC Networks	Prism Frisbee	prism54u	54 Mbit/s	✓	–	–	EUR 50

¹ Drivers not officially released

less LAN adapter. Box 2 shows you the kind of output to expect. If the command does not show you a wireless device, type `/sbin/lsmod | grep prism` to check if the `prism2_usb` module is loaded. If not, you can try typing `modprobe prism2_usb` to manually load the module.



Figure 1: Setting up a USB WLAN adapter with Prism2 chipset on SuSE Linux 9.1.

The kernel messages when you plug in your USB stick are also quite useful. To read them, working as `root`, type `tail -f /var/log/messages` in a terminal window; this allows you to watch the messages in the window while plugging in or unplugging the stick. Systems that support hotplug (such as Fedora, Mandrake and Suse) should load the module automatically when you insert the WLAN stick.

You should also check your firewall. Suse Linux 9.2 or newer launches the firewall automatically when a network device is enabled. You need to set the

firewall settings to account for the new device, or disable the firewall initially to make sure that it is not causing any issues.

Bleeding Edge

The only device in the 54 Mbit class that will run with Linux at present is the D-Link DWL-G122. Unfortunately, the driver has not been released at this time of writing. For our Linux Magazine lab, we tested a beta version with kernel 2.6.7. Unfortunately, D-Link does not intend to release a version for kernel 2.4.

You first need to compile the driver by typing `make -C /path/to/your/kernel-sources SUBDIRS= $PWD modules`, then (working as `root`) load the module by typing `insmod rt2570.ko`. Finally, enable the WLAN device by typing `ifconfig rausb0 up`; you can assign a static IP address or use the DHCP client if you have a DHCP server. According to D-Link, the official Linux driver for kernel 2.6 should be up for grabs on the FTP server shortly. Let's hope that the ad-hoc mode issues have been removed by then.

Experimental

Developers and kernel hackers might like to check out the `WL-U356` adapter by Planet and the `SMC2862W-G` by SMC Networks. There is a Linux driver on the Planet Homepage at [4] for the Planet adapter; the driver will build on kernel 2.4 and 2.6.

After building the driver, by typing `make`, again working as `root`, load the `zd1211` manually, and enable the interface by typing `ifconfig eth1 up`. `iwconfig` should now list the device. In our Linux Magazine lab, this was as far as we got; any attempts to get the stick to talk to our access point or other computers were doomed to failure. The problem was that `iwconfig` did not allow us to set

Box 1: Setting Up the Prism2_usb Adapter

To set up a USB WLAN adapter with the Prism2 chipset, you need `linux-wlan-ng` [2] and the `wireless-tools` [3]. Although most distributions use two packets to store these tools, `linux-wlan-ng` is part of the `wireless-tools` on SuSE, and there is no need to install it. SuSE also uses a different approach to setting up the Prism2 USB adapter, so SuSE users are advised to stick to the YaST-based approach.

To compile the `wireless-tools`, first unpack the `tar.gz` archive, then change to the directory created by unpacking the archive and type `make`. You will normally want to `su` to `root` and type `make install` to place the tools in `/usr/local`. If you want to select a different path `/usr` for example, you will need to edit the `makefile`. The `linux-wlan-ng` install follows a similar pattern. In this case, `make config` launches a configuration dialog where you can select the drivers you need. For the USB stick, say no to the first three questions, and respond to `Build Prism2.5 USB (_usb) driver?` (y/n) by typing [y] and [Enter]. You can simply press [Enter] for all the other questions.

Assuming that the kernel sources are installed, and correctly configured, `make` will launch into the build process, and `make install`, working as `root`, will install the program.

After completing the install, add the following line

```
alias wlan0 prism2_usb
```

to the end of your `/etc/modprobe.conf`, or `/etc/modules.conf` (for Kernel 2.4.x), and then type `modprobe prism2_usb` to load the kernel module. `iwconfig` should now have a `wlan0` entry for the card (see Box 2).

To enable the adapter, you still need to edit two files below `/etc/wlan/`. To allow two wireless cards running in ad-hoc mode to see each other, the cards need both an IP address and a unique network ID, or ESSID. Enter a value for `SSID_wlan0` in your `/etc/wlan/wlan.conf` to handle this (in about line 80), for example

```
SSID_wlan0="wireless"
```

The next step is to rename the `/etc/wlan/wlanconf-DEFAULT` file to your choice of ESSID (keeping to our example, this would be `wlanconf-wireless`), and change line 31 from `IS_ADHOC=n` to `IS_ADHOC=y` to use ad-hoc mode. Now launch the WLAN service by typing `/etc/init.d/wlan start`. If all goes well, you should be able to assign an IP address to your adapter using `ifconfig wlan0 192.168.1.1 netmask 255.255.255.0` and then ping the other machine: `ping 192.168.1.2`.

To use an access point, you need to select `Managed` mode instead of `Ad-hoc`. In other words, you would need to change the entry in `/etc/wlan/wlanconf-wireless` back to `IS_ADHOC=n`. As the access point assigns the channel in managed mode, you also need to enable channel scanning to tell the WLAN adapter to scan the channels. To do so, set the `WLAN_SCAN` variable in `/etc/wlan/wlan.conf` to `WLAN_SCAN=y`. If you know which channel your access point uses, you can delete the channels you do not require from the `ChannelList` to speed up the scan.

Box 2a: iwconfig examples without encryption in ad-hoc mode

```

01 suse92:/home/marcel # iwconfig
02 lo          no wireless extensions.
03
04 eth0        no wireless extensions.
05
06 wlan0       IEEE 802.11-DS  ESSID:"wireless"  Nickname:"suse92"
07             Mode:Ad-Hoc  Frequency:2.442 GHz  Cell: 02:0F:DA:B5:C1:3E
08             Bit Rate:2 Mb/s  Tx-Power:2346 dBm
09             Retry min limit:8  RTS thr:off  Fragment thr:off
10             Encryption key:off
11             Link Quality=0/92  Signal level=-100 dBm  Noise level=-100
dBm
12             Rx invalid nwid:0  Rx invalid crypt:0  Rx invalid frag:0
13             Tx excessive retries:0  Invalid misc:0  Missed beacon:0
14
15 sit0        no wireless extensions.

```

any other parameters, including the ESSID. Linux Magazine has approached the driver developer, although a reaction has not been forthcoming at this time of writing.

The SMC adapter is another task for the brave at this time. The drivers for the Prism Frisbee based WLAN device are under development and available from [5], along with the firmware. After unpacking the sources, follow the same steps as for the DWL-G122, that is (working as *root*), type `make -C /path/to/your/kernel/sources SUBDIRS= SPWD modules`, then load the module by entering `insmod prism54u.ko`. The same thing

happens as with the Planet stick. The adapter will be detected when you load the `prism54u` module, but, if you have the same experience as we did, you will not be able to talk to it.

Closing the Gaps

It makes sense to set up a non-encrypted WLAN connection for test purposes, but in a production environment, a WEP key is imperative. To set up an encrypted connection for the Prism2 USB adapter, you need to edit the `/etc/wlan/wlanconf-ESSID` file. Use the `AuthType` variable to specify whether `linux-wlan-ng` will be using a *shared key*. However, as this

Box 2b: iwconfig examples with encryption in managed mode

```

01 client:/home/otto # iwconfig
02 lo          no wireless extensions.
03
04 eth0        no wireless extensions.
05
06 wlan0       IEEE 802.11-b  ESSID:"wireless"  Nickname:"wireless"
07             Mode:Managed  Frequency:2.462 GHz  Access Point:
08             00:09:5B:2D:B8:98
09             Bit Rate:11 Mb/s  Tx-Power:2346 dBm
10             Retry min limit:8  RTS thr:off  Fragment thr:off
11             Encryption key:3BFA-1658-F26F-65BB-1015-0222-49  Security
mode:open
12             Link Quality=92/92  Signal level=-40 dBm  Noise level=-95
dBm
13             Rx invalid nwid:0  Rx invalid crypt:0  Rx invalid frag:0
14             Tx excessive retries:0  Invalid misc:0  Missed beacon:0
15 sit0        no wireless extensions.

```

method is more prone to attack, you might prefer to opt for *Open* mode. Version `0.2.1-pre22` of the tools caused some confusion in our tests. Despite modifying the variable, `iwconfig` insisted on displaying `Security mode:restricted` as the mode. Tests with shared keys and in open mode demonstrated that the USB stick was not simply ignoring the variable, however.

Now change the `#= WEP=` section, as shown in Box 3. The first two variables allow you to specify if the client will be using hardware-based encryption (`false`) or if the client will use encryption based on the `linux-wlan-ng` driver. The software-based variant is supposedly quicker, so set this variable to `true`. The `dot11PrivacyInvoked= true` entry enables encryption.

In the next line, specify the encryption key. The program will store a maximum of four decryption keys to allow you to associate with other wireless networks. To prevent your host from accepting unencrypted data, set the `dot11ExcludeUnencrypted` variable to `true`; this only works in shared key mode.

The second section indicates the key generation mechanism that `linux-wlan-ng` will use. By default `make install` installs the `nwepgen` tool. The `add-ons` subdirectory below the `linux-wlan-ng` source code directory also has the `lwepgen` and `keygen` tools, which you can build and then copy to `/sbin/` or `/usr/local/sbin/`. Both of these tools can generate WEP keys, however, they are not compatible with all devices.

If you want to use one of these tools, you need to enter a password below `PRIV_GENSTR`; the password is used as a seed for generating the key. However, the normal case is to create a password on the access point and simply enter the key below `dot11WEPDefaultKey0`. Note that you need to enter the key as shown in the example, not in groups of four digits separated with minus signs or colons.

`PRIV_KEY128` allows you to opt for the more secure 128-bit or the older 64-bit variant. As some older devices do not support 128 bit keys, 64 bit is the default, however, all the WLAN adapters in our test support 128-bit encryption.

Again, Suse Linux offloads some of this configuration work from the user. You simply need to select the key input

type (*Passphrase, ASCII or Hexadecimal*) and type the encryption key in the text box below the radio buttons. The tools we mentioned previously also help you if you want to use a hexadecimal key; on Suse Linux, these tools are part of the *wireless-tools* package.

Logout

Although WLAN Stick manufacturers have a wide range of 54-Mbit products on the market, Linux users will need to bide their time and make do with an 11-

Mbit device based on the Prism2 chipset. This kind of performance is fine for surfing the Internet. Don't lose hope; the

D-Link DWL-G122 is a 54-Mbit USB WLAN adapter that works on Linux, and the drivers are quite advanced. ■

Box 3: Setting up WEP encryption

```
01 #=====WEP=====
02 # [Dis/En]able WEP. Settings only matter if PrivacyInvoked is true
03 lnxreq_hostWPEncrypt=true # true|false
04 lnxreq_hostWEPDecrypt=true # true|false
05 dot11PrivacyInvoked=true # true|false
06 dot11WEPDefaultKeyID=0 # 0|1|2|3
07 dot11ExcludeUnencrypted=true # true|false, in AP this means WEP is
   required.
08
09 # If PRIV_GENSTR is not empty, use PRIV_GENTSTR to generate
10 # keys (just a convenience)
11 # add-ons/ in the tarball contains other key generators.
12 PRIV_GENERATOR=/sbin/nwepgen # nwepgen, Nessus compatible
13 PRIV_KEY128=true # keylength to generate
14 PRIV_GENSTR=""
15
16 # or set them explicitly. Set genstr or keys, not both.
17 dot11WEPDefaultKey0=3B:FA:16:58:F2:6F:65:BB:10:15:02:22:49
18 dot11WEPDefaultKey1= #
   xx:xx:xx:xx:xx:xx:xx:xx:xx:xx:xx:xx:xx
19 dot11WEPDefaultKey2= # e.g. 01:20:03:40:05 or
20 dot11WEPDefaultKey3= #
   01:02:03:04:05:06:07:08:09:0a:0b:0c:0d
```

INFO

- [1] WLAN support: http://www.linux-wlan.org/docs/wlan_adapters.html.gz
- [2] Linux-wlan-ng project: <http://www.linux-wlan.org>
- [3] Wireless-tools: http://www.hpl.hp.com/personal/Jean_Tourrilhes/Linux/Tools.html
- [4] Planet driver: <http://www.planet.com.tw/download.php>
- [5] Prism54 USB driver: <http://jbnote.free.fr/prism54usb/>

Advertisement